 




**SB-DP46XA**  
**Outdoor Deck Planter Pole**

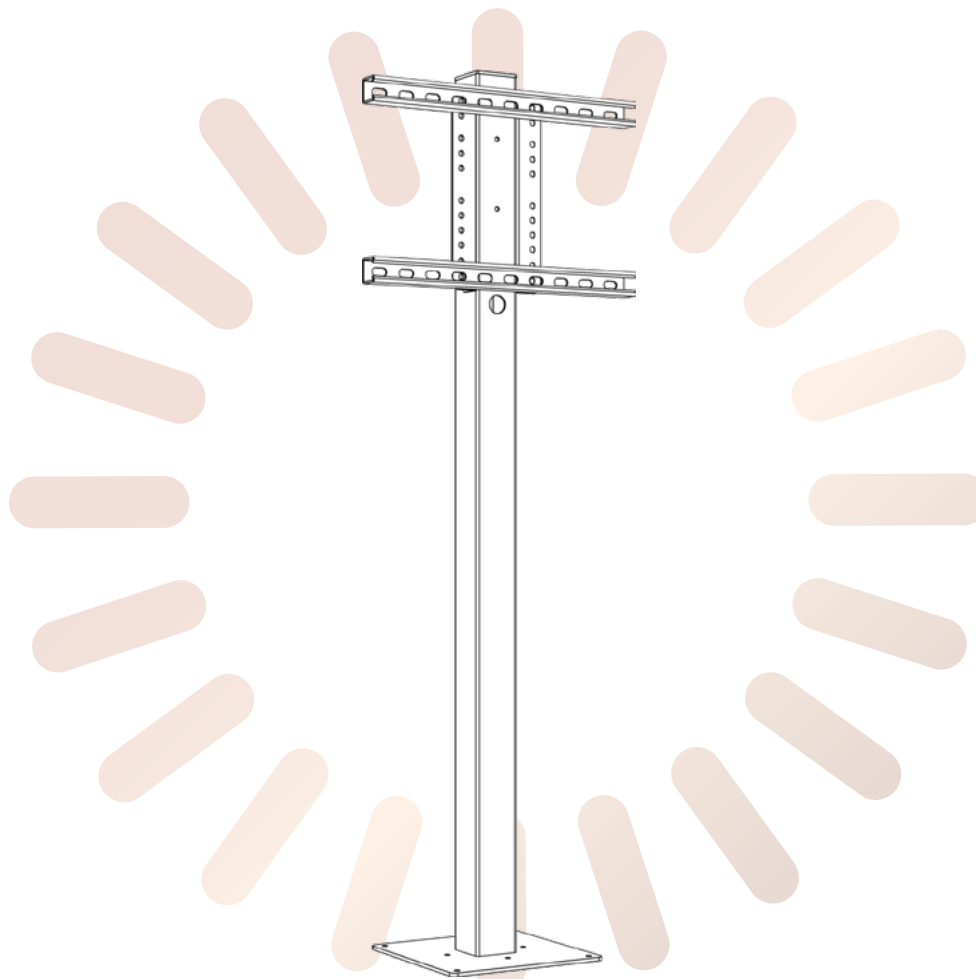

**Install Guide**

## Warnings

TV must be installed at least 5 feet away from water's edge.

**Warning:** Do not mount a TV that weighs over 250 lb.

## Disclaimer


 

SunBriteTV LLC intends to make this manual accurate and complete. However, we make no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. SunBriteTV makes no representation of warranty, expressed or implied regarding the information contained herein. SunBriteTV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

## Contents




Deck Planter Pole (A)

Mounting Bar (B) × 2




Bag 1 (for attaching a horizontal mounting bar)

Item	Image	Qty
M10 Lock Nuts (C)		5
M10 × 25 Bolts (D)		5
M10 Washers (E)		5


Bag 2 (for mounting an accessory)

Item	Image	Qty
M8 Unistrut Nuts (F)		5
M8 × 30 Bolts (G)		5
M8 Washers (H)		5


Bag 3 (for mounting an accessory)

Item	Image	Qty
M10 Unistrut Nuts (I)		5
M10 × 30 Bolts (J)		5
M10 Washers (K)		5

Bag 4 (finishing touches)

Item	Image	Qty
Cable Hole Cap (L)		3

Hardware Box (finishing touches)


Item	Image	Qty
Pole Cover (M)		1

---

## TV Placement Guidelines

SunBriteTV™ LCD televisions are twice as bright as most indoor LCD TVs. The sun, however, delivers more than 30 times the brightness of our TVs. Therefore, do not place the TV where the screen faces direct sunlight; this will cause the image on the screen to wash out.

Intense direct sunlight falling on the screen over an extended period of time may cause dark spots to form on the image. This is a characteristic of LCD TV technology, and is a temporary condition that will go away after the screen is pointed away from the sun.

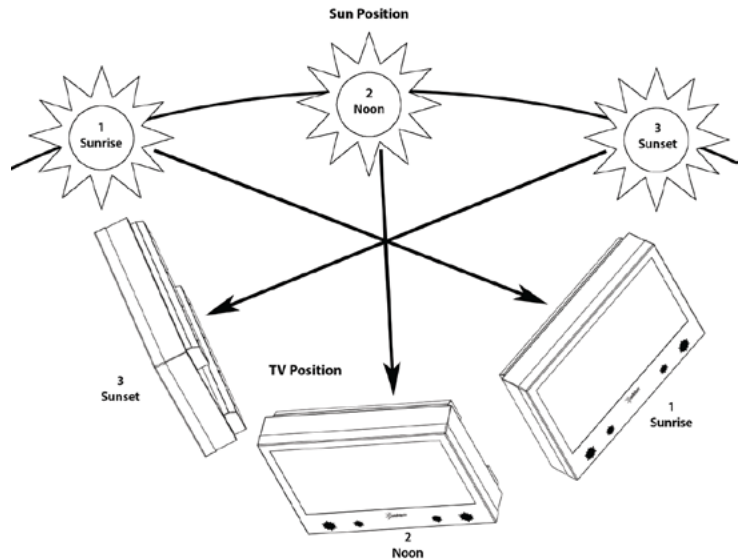

Ideal placement is in an area where the TV is shaded by trees, landscape and/or structures, or under a patio cover or gazebo. Choose an area that is away from standing water and sprinklers (Irrigation water may contain minerals that can damage the finish on the pole and TV.).

We recommend mounting the TV on a SunBrite brand articulating, tilt-and-swivel mount so the screen can be turned away from the location of the sun. The articulating wall mount also allows you to position the TV away from any highly reflective surfaces, such as water, white walls, concrete, etc.

We also recommend using the SunBriteTV dust cover when the TV is not in use, especially if the sun is shining on the TV during the day.

Bring the appropriate signal cables to the location (CATV, Video, Audio, etc.).

If using the Pole in a planter, create an appropriately sized concrete pier with a level top surface at least three inches above the grade.

If using the Pole on a deck, chose a flat, level, shaded area away from sprinklers and standing water

---

## Installation

### Install Deck Planter Pole


Concrete anchors not provided; we recommend outdoor-rated 5/16" × 2 1/2" wedge or sleeve anchors.

Orient the pole so that the flat side of the wall plate faces the seating area. Use the bottom of the pole as a template to mark the locations where you must drill.

Drill eight holes into the concrete using a 5/16" masonry bit. Insert anchors, per their instructions.

Remove anchor washers and nuts. Align the pole mount over the anchors. Loosely replace the washers and nuts.

Shim the pole so it is level and plumb. Secure the pole by tightening the anchor nuts.

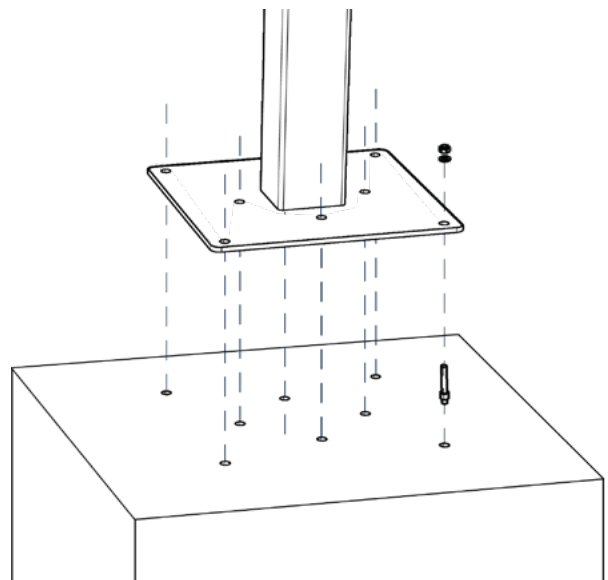


## Attach the Horizontal Mounting Bars

This pole mount works with select SunBrite Outdoor Wall Mounts. On each side of the top of the deck planter pole are eleven holes. See the product page ([snapav.com/shop/en/snapav/sb-dp46xa-bl](https://snapav.com/shop/en/snapav/sb-dp46xa-bl)) or visit the Tech Community (<https://tech.control4.com>) for a compatibility guide to determine which holes your wall mount requires.

Center one horizontal mounting bar (B) on the upper pair of desired holes, with the flat side of the bar against the pole mount (A). Insert a 1" bolt (D) through a 3/8" washer (E) and then through the mounting bar and hole from the front, and secure it with a 3/8" lock nut (C) on the back side of the pole mount (A).

Repeat these steps to secure the other side of the horizontal mounting bar (B).

Center the other horizontal mounting bar on the lower holes as desired, with the flat side of the bar against the pole. Secure it with bolts, washers, and nuts as described above.

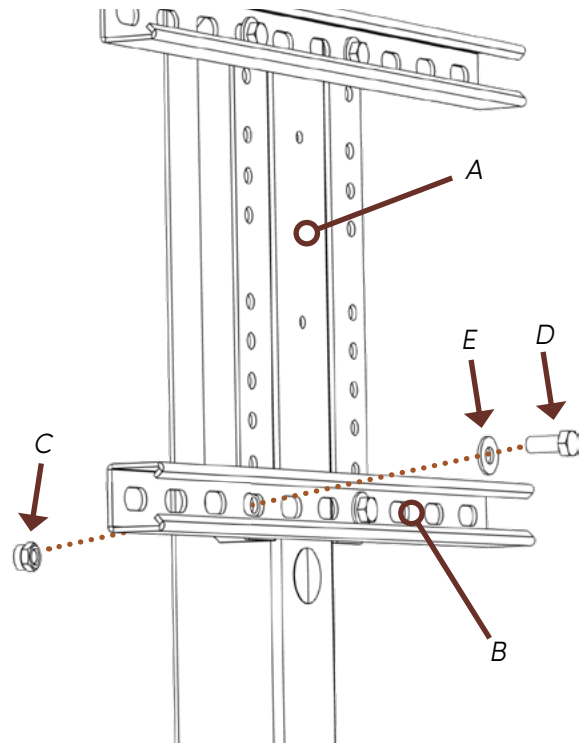

## Install Pole Cover

Orient the pole cover (M) so that the metal strips are sitting on the top of the pole. Press down on the plastic cover until it is fully seated into the pole.

## Attach TV to Wall Mount

For complete instructions of how to attach the TV to the Wall Mount, refer to the installation instructions packaged with that wall mount.

## Thread Cables

Thread the cables through the cable hole on the front of the pole mount, and exit the cables through one or both of the cable holes on the rear of the pole.

Insert a cable hole cap (L) to seal any unused cable holes.

## Mount TV

Attach the wall mount to the horizontal mounting bars using the appropriate Unistrut nuts (F or I), washers (H or K), and bolts (G or J) detailed in the included cutsheet.

## Technical Support

For chat and telephone, visit <https://tech.control4.com/s/contactsupport> • Email: [TechSupport@SnapOne.com](mailto:TechSupport@SnapOne.com)

Visit [tech.control4.com/technician](https://tech.control4.com/technician) for discussions, instructional videos, news, and more.

## Warranty and Legal Notices

Find details of the product's Limited Warranty and other resources such as regulatory notices and patent and safety information, at [snapone.com/legal](https://snapone.com/legal) or request a paper copy from Customer Service at 866.424.4489.

Copyright ©2022, Snap One, LLC. All rights reserved. Snap One and its respective logos are registered trademarks or trademarks of Snap One, LLC, in the United States and/or other countries. Control4, SunBriteDS, and SunBriteTV are also registered trademarks or trademarks of Snap One, LLC. Other names and brands may be claimed as the property of their respective owners. Snap One makes no claim that the information contained herein covers all installation scenarios and contingencies, or product use risks. Information within this specification subject to change without notice.

221014-0830

Part # 200-00770-B